

T7M/ T7Q Vehicle Docking Station (ADK01)



по вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72 Астана +7(7172)727-132 Белгород (4722)40-23-64 Брянск (4832)59-03-52
 Владивосток (423)249-28-31 Волгоград (844)278-03-48 Вологда (8172)26-41-59 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89 Иваново (4932)77-34-06 Ижевск (3412)26-03-58 Казань (843)206-01-48
 Калининград (4012)72-03-81 Калуга (4842)92-23-67 Кемерово (3842)65-04-62 Киров (8332)68-02-04
 Краснодар (861)203-40-90 Красноярск (391)204-63-61 Курск (4712)77-13-04 Липецк (4742)52-20-81
 Магнитогорск (3519)55-03-13 Москва (495)268-04-70 Мурманск (8152)59-64-93 Набережные Челны (8552)20-53-41
 Нижний Новгород (831)429-08-12 Новокузнецк (3843)20-46-81 Новосибирск (383)227-86-73 Орел (4862)44-53-42
 Оренбург (3532)37-68-04 Пенза (8412)22-31-16 Пермь (342)205-81-47 Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64 Самара (846)206-03-16 Санкт-Петербург (812)309-46-40 Саратов (845)249-38-78
 Смоленск (4812)29-41-54 Сочи (862)225-72-31 Ставрополь (8652)20-65-13 Тверь (4822)63-31-35
 Томск (3822)98-41-53 Тула (4872)74-02-29 Тюмень (3452)66-21-18 Ульяновск (8422)24-23-59
 Уфа (347)229-48-12 Челябинск (351)202-03-61 Череповец (8202)49-02-64 Ярославль (4852)69-52-93

единый адрес: dbk@nt-rt.ru

Specification of Vehicle Docking for T7M/ T7Q (ADK01)

I/O Ports	<ul style="list-style-type: none"> • One RJ-45 jack • Three USB connectors support USB2.0 • One DC-in connector for car adaptor • One SMA Ext. Antenna connector for GPS • One Serial port (direct signal from the Unit)
Audio	<ul style="list-style-type: none"> • One speaker, sound pressure 75dB
Connector	<ul style="list-style-type: none"> • One 35 pin “Pogo” docking connector
Power	
Dock / Undock Lever	<ul style="list-style-type: none"> • A clamp mechanism should be used to fasten unit when docked. • Optional Locking mechanism to lock/unlock the unit in the dock by a key
ME Structure	<ul style="list-style-type: none"> • VESA mounting holes (75mm x 75 mm) • Dimension: 244(H) x 203(W) x 106(D) mm • Weight: 2 kg
Reliability	<ul style="list-style-type: none"> • Shock <ul style="list-style-type: none"> - MIL-STD-810G, Method 516.6, Procedure V • Vibration <ul style="list-style-type: none"> - MIL-STD-810G, Method 514.6, Annex C Category 4, Fig. 514.6C-1
Environment	<ul style="list-style-type: none"> • Temperature <ul style="list-style-type: none"> -Operating: -20°C ~ 50°C -Storage: -40°C ~ +70°C • Humidity: <ul style="list-style-type: none"> -Operating: 20% ~ 80% -Storage: 8% ~ 90%
Regulation	<ul style="list-style-type: none"> • EMI: <ul style="list-style-type: none"> -US: FCC Class A DOC -Canada: FCC Class A DOC -EU: CE • RoHS/REACH compliant


по вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72 Астана +7(7172)727-132 Белгород (4722)40-23-64 Брянск (4832)59-03-52
Владивосток (423)249-28-31 Волгоград (844)278-03-48 Вологда (8172)26-41-59 Воронеж (473)204-51-73
Екатеринбург (343)384-55-89 Иваново (4932)77-34-06 Ижевск (3412)26-03-58 Казань (843)206-01-48
Калининград (4012)72-03-81 Калуга (4842)92-23-67 Кемерово (3842)65-04-62 Киров (8332)68-02-04
Краснодар (861)203-40-90 Красноярск (391)204-63-61 Курск (4712)77-13-04 Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13 Москва (495)268-04-70 Мурманск (8152)59-64-93 Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12 Новокузнецк (3843)20-46-81 Новосибирск (383)227-86-73 Орел (4862)44-53-42
Оренбург (3532)37-68-04 Пенза (8412)22-31-16 Пермь (342)205-81-47 Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64 Самара (846)206-03-16 Санкт-Петербург (812)309-46-40 Саратов (845)249-38-78
Смоленск (4812)29-41-54 Сочи (862)225-72-31 Ставрополь (8652)20-65-13 Тверь (4822)63-31-35
Томск (3822)98-41-53 Тула (4872)74-02-29 Тюмень (3452)66-21-18 Ульяновск (8422)24-23-59
Уфа (347)229-48-12 Челябинск (351)202-03-61 Череповец (8202)49-02-64 Ярославль (4852)69-52-93

единый адрес: dbk@nt-rt.ru

Product Overview


No.	Item
	Latch
	Guide-Pins
	Terminal
4	Latch bar (with key slot)(Optional)
5	Mounting holes for VESA mount
	USB Ports
	Serial port (RS-232)
	LAN (RJ-45) port
	DC-in jack
10	GPS

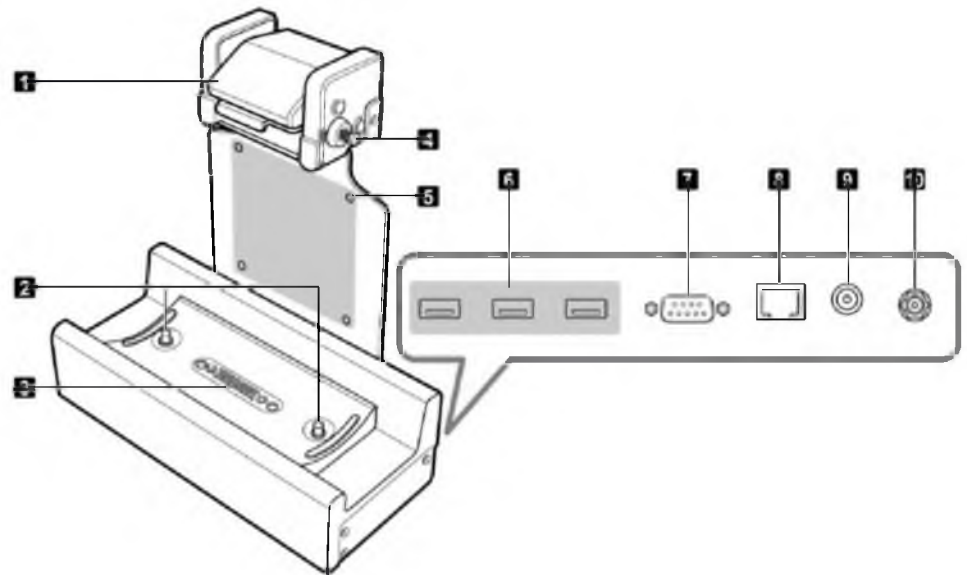

*Please contact dealer for appropriate adapter



Installing VESA Mount Plate

Align the plate mounting holes with the holes at the back of the docking station as shown in the illustration. Then secure it with the four included screws.

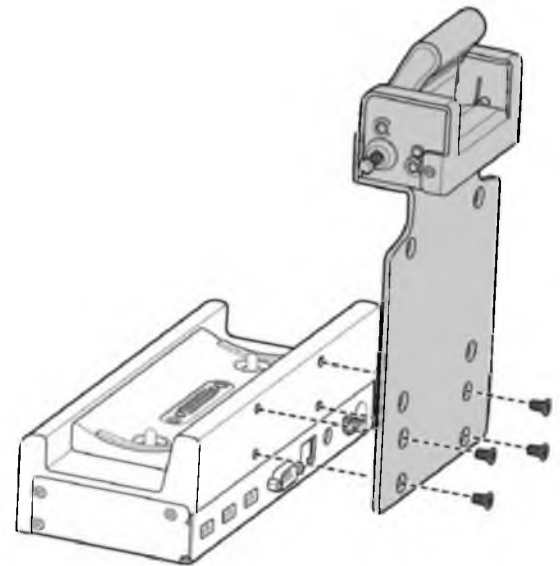

Docking the Tablet PC

1. Align the Tablet PC by the guide-pins and terminal contact and then place the Tablet PC slantly onto the docking cradle.
2. To secure the Tablet PC in place, pull the latch forward until it is fully engaged.

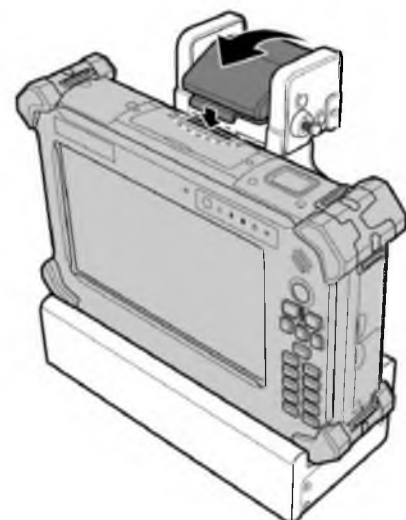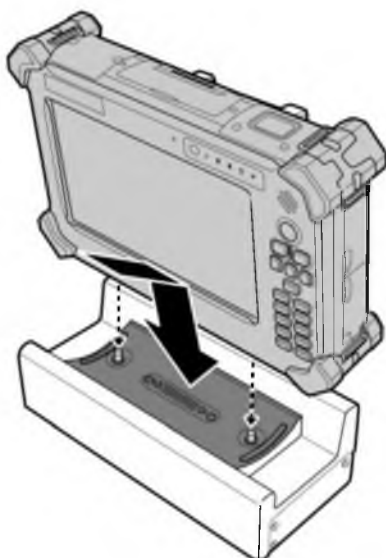

Locking the Latch (Optional)

Fully push the latch bar into position to ensure the latch is tightly secured.




To unlock, insert the latch bar key and turn it clockwise until a "click" is heard, indicating the latch bar is released. Then, remove the key from the key slot.



Connecting with Other Devices

Use the Docking Cradle connectors to connect the power, Internet, and other computer peripherals such as serial port devices, GPS, and USB peripheral devices.

If you mount the docking cradle on the VESA mount, you can attach the cable clamp on the bottom of the cradle to manage all connection cables.

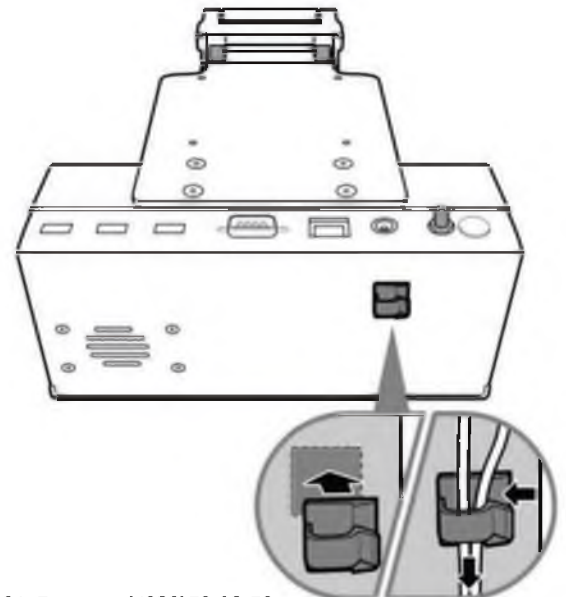

по вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72 Астана +7(7172)727-132 Белгород (4722)40-23-64 Брянск (4832)59-03-52
Владивосток (423)249-28-31 Волгоград (844)278-03-48 Вологда (8172)26-41-59 Воронеж (473)204-51-73
Екатеринбург (343)384-55-89 Иваново (4932)77-34-06 Ижевск (3412)26-03-58 Казань (843)206-01-48
Калининград (4012)72-03-81 Калуга (4842)92-23-67 Кемерово (3842)65-04-62 Киров (8332)68-02-04
Краснодар (861)203-40-90 Красноярск (391)204-63-61 Курск (4712)77-13-04 Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13 Москва (495)268-04-70 Мурманск (8152)59-64-93 Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12 Новокузнецк (3843)20-46-81 Новосибирск (383)227-86-73 Орел (4862)44-53-42
Оренбург (3532)37-68-04 Пенза (8412)22-31-16 Пермь (342)205-81-47 Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64 Самара (846)206-03-16 Санкт-Петербург (812)309-46-40 Саратов (845)249-38-78
Смоленск (4812)29-41-54 Сочи (862)225-72-31 Ставрополь (8652)20-65-13 Тверь (4822)63-31-35
Томск (3822)98-41-53 Тула (4872)74-02-29 Тюмень (3452)66-21-18 Ульяновск (8422)24-23-59
Уфа (347)229-48-12 Челябинск (351)202-03-61 Череповец (8202)49-02-64 Ярославль (4852)69-52-93